


BEADED INSET

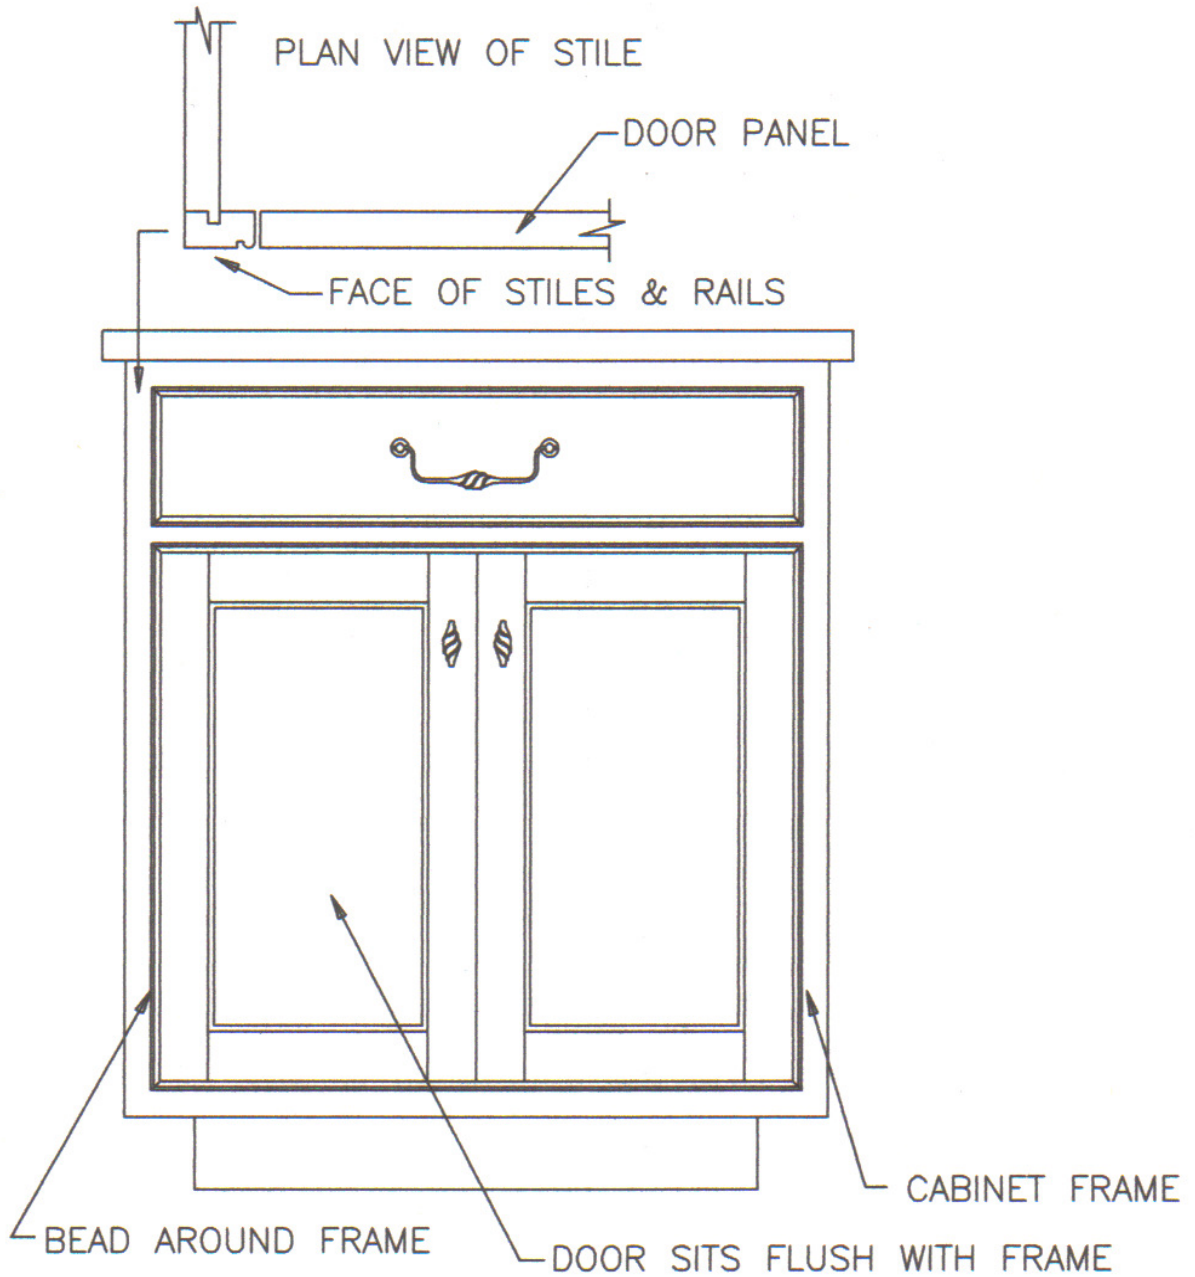

THIS STYLE IS THE MOST POPULAR STYLE. THE DOOR IS SET INTO THE CABINET FRAME. THE CABINET FRAME HAS A BEAD CUT INTO THE EDGE. THIS IS THE MOST COSTLY STYLE.